
## Installation Instructions Removable Mullion: 811

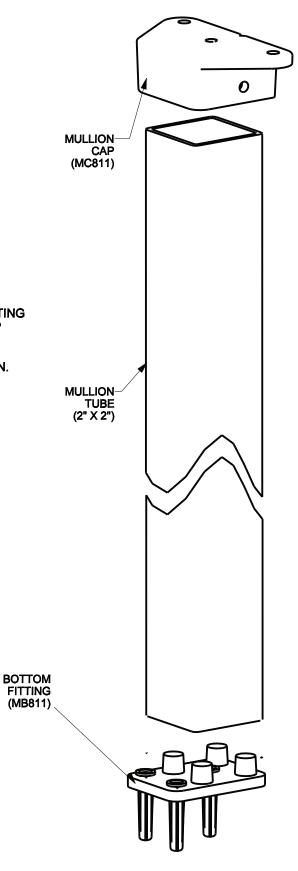

For online instructions, assistance or warranty information: Call 1-800-392-5209 or visit https://dhwsupport.dormakaba.com/hc/en-us

- I. Center **BOTTOM FITTING** between doors and flush with closed doors (FIG IA). Fasten in place with anchors and screws provided (FIG IB).
- 2. Center **MULLION CAP** between door and flush with closed doors (FIG 2A). Mark centers for 3-mounting holes on frame, then drill and tap for I/4-20 M.S. (FIG 2A).
- 3. Determine **MULLION LENGTH** (FIG IB and 2B) Cut top of **MULLION** to determined length.
- Place MULLION CAP on top of MULLION. Place MULLION around 4 locating posts on BOTTOM FITTING Make sure MULLION is seated on BOTTOM FITTING (FIG IB). With MULLION in position fasten MULLION CAP to the frame (FIG 2B).
- 5. Install 2 1/4-20 MS in MULLION CAP to secure MULLION.



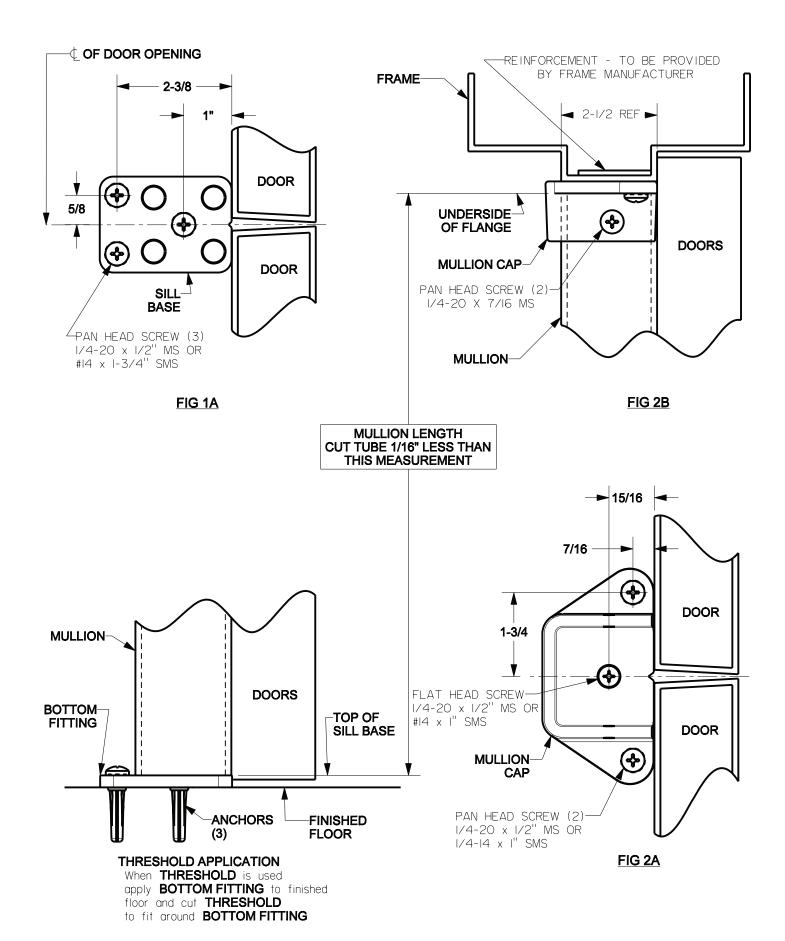


FIG 1B