


HD8000 AF80P x PD

Flat arm for parallel arm mount
with parallel drop bracket and drop plate [DP80]

Installation Instructions

OVERVIEW

Surface closer components

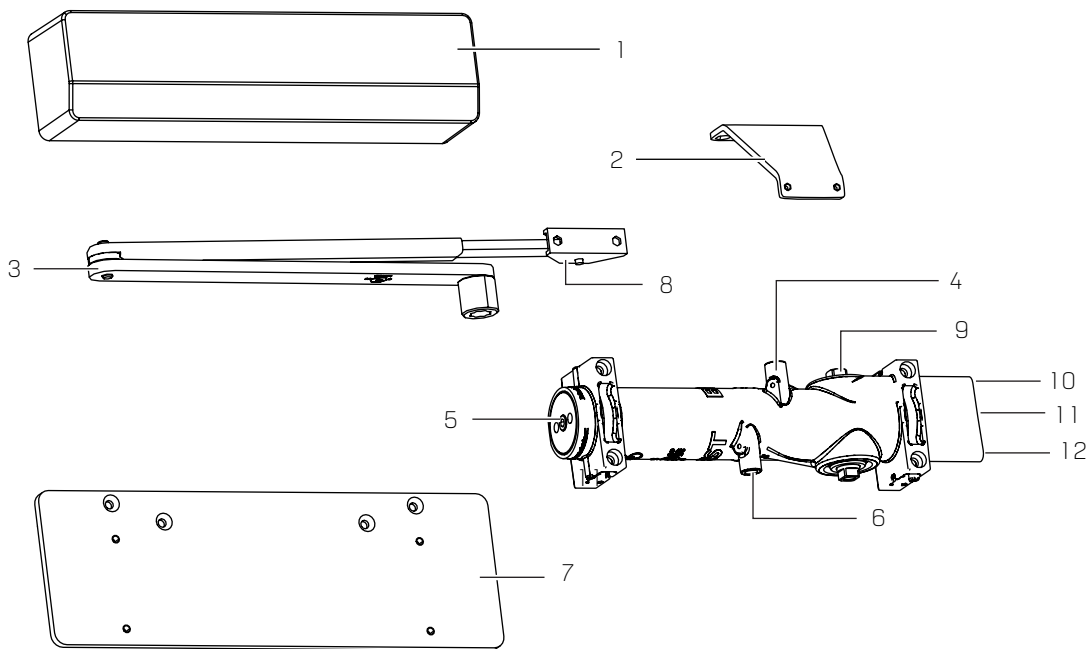

1 Full cover (standard)

2 Parallel drop bracket

3 Flat arm

4 Advanced variable backcheck

5 Spring force adjustment

6 Backcheck adjustment

7 Drop plate (optional)

8 Arm/shoe

9 Pinion

10 Delayed action adjustment

11 Sweep speed adjustment

12 Latch speed adjustment

Table of contents

1	Technical specifications	3
1.1	Overview	3
1.2	Tools recommended	3
1.3	Handing the door	3
2	Instructions - parallel mount	4
2.1	Installing drop plate and surface closer	4
2.2	Installing parallel drop bracket	4
2.3	Installing and securing main arm	4
2.4	Securing main arm (continued)	5
3	Adjustments	6
3.1	Adjust closing speeds: sweep, latch, backcheck, delayed action	6
3.2	Adjust spring force	7
4	Install covers	8

1 Technical specifications

1.1 Overview



Sex nuts are required for attachment of components to unreinforced doors and to wood or plastic faced composite type fire doors, unless an alternative method is identified in the individual door manufacturer's listings.



Maximum door opening degree is 180°.



Know the swing of the door which is being installed prior to installation.



Verify closer spring size prior to installation.



Make sure door efficiently operates prior to installing closer.



Do not hammer arm onto spindle. Warranty will be void.


1.2 Tools recommended

Table 1

Drill bits:	#3 Phillips screwdriver
Metal: 1 3/64" or #7 drill bit; 1/4-20 tap	3/16" flat head screwdriver
Wood: 5/32" bit	5mm hex key
1/2" box wrench	

1.3 Handing the door

Fig. 1

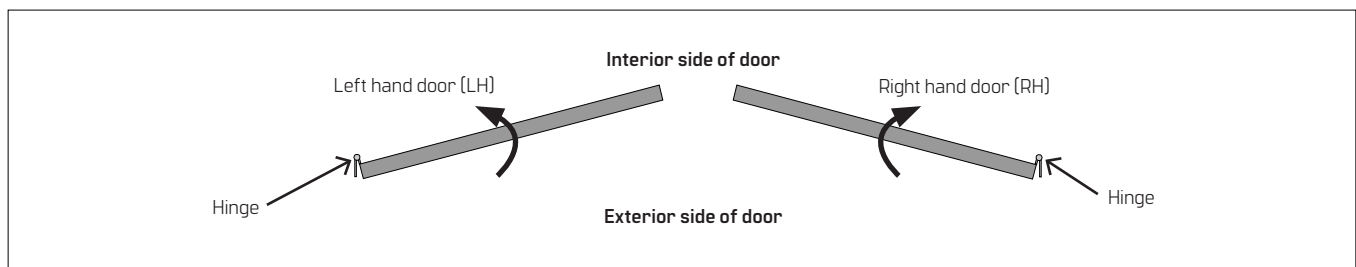

2 Instructions - parallel mount

2.1 Installing drop plate and surface closer

Fig.2

2.1.1 Reference template T9 4 8 1 9 and T9 4 8 2 0.

2.1.2 Secure drop plate.

2.1.3 Secure closer body.

NOTE: Ensure pinion is oriented toward hinge.

2.2 Installing parallel drop bracket

Fig.3

2.2.1 Secure parallel drop bracket with included fasteners.

Parallel drop bracket (PD)

2.3 Installing and securing main arm

Fig.4

⚠ Do not hammer arm onto spindle. Warranty will be void.

2.3.1 Slide bar into connecting arm.

2.3.2 Secure with hex bolt.

NOTE: Leave bolt loose.

2.3.3 Secure arm shoe to parallel drop bracket.

2.3.4 Preload pinion by placing wrench on bottom pinion and rotate pinion 4 5° TOWARD HINGE.

Bar

Connecting arm

Hex bolt

Secure into THIS hole.

Parallel drop bracket (PD)


Arm shoe

Pinion

45°

2.4 Securing main arm (continued)

Fig.5

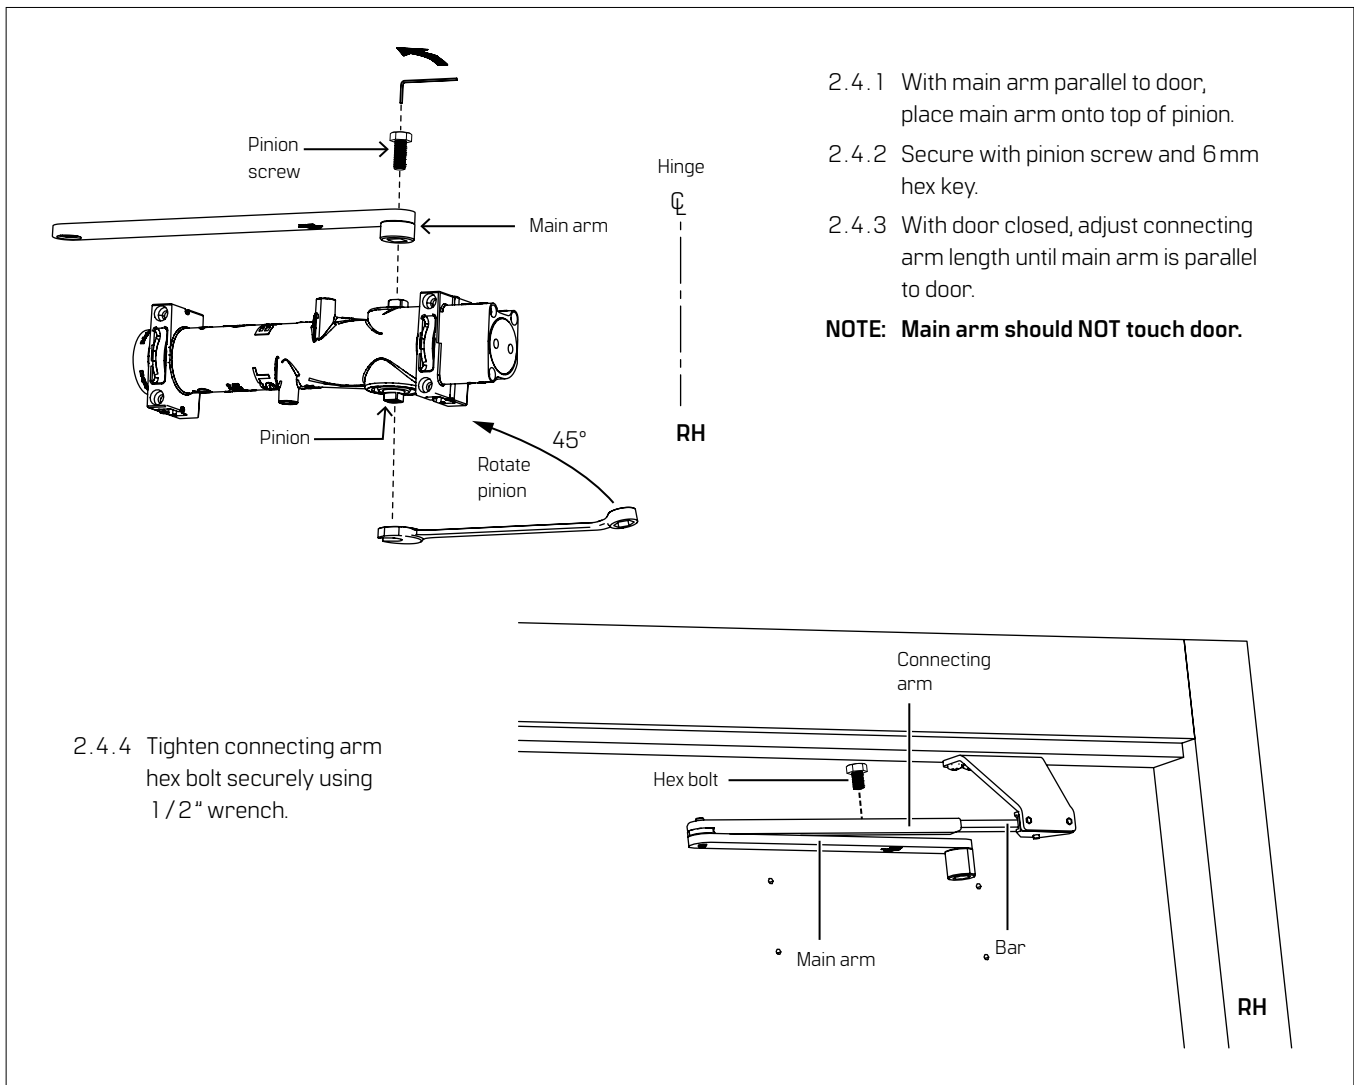

3 Adjustments



Confirm closer spring size prior to making any closing speed adjustments.



Do not back valve heads out beyond closer casting.



Maximum opening angle is 180°.




Door should close in 3 to 6 seconds from 90°.



Do not close valves completely.

3.1 Adjust closing speeds: sweep, latch, backcheck, delayed action

Fig.6

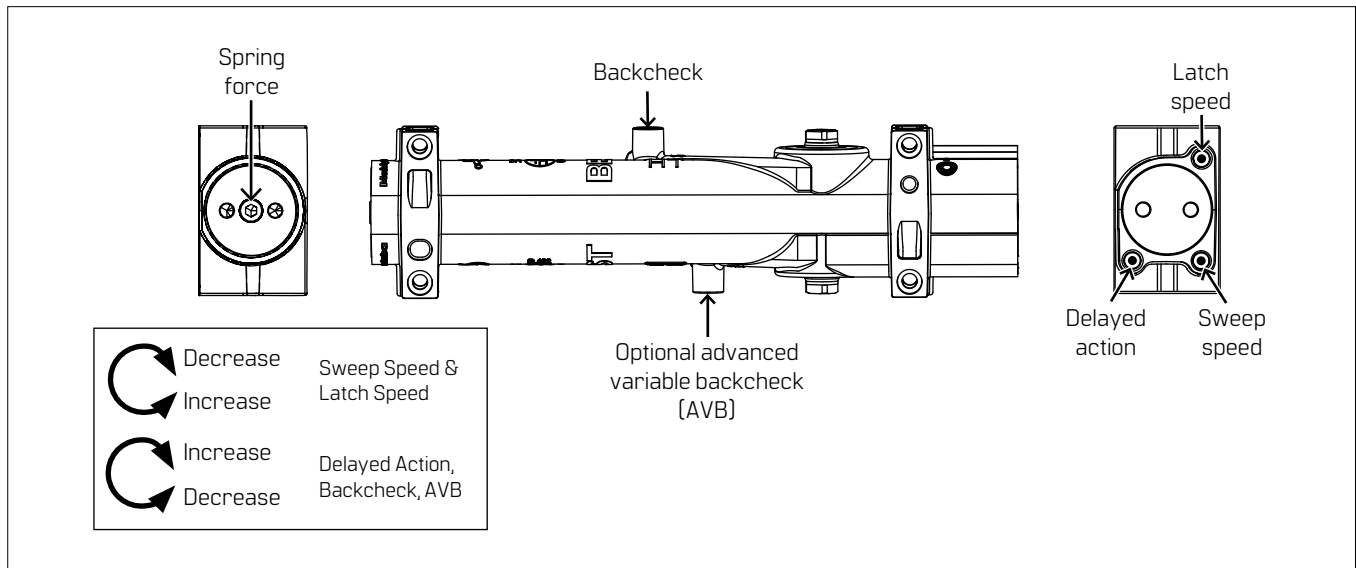

3.1.1 Adjust **closing sweep speed**: 90° to start of latch speed.

- Increase sweep speed: Turn valve counter-clockwise.
- Decrease sweep speed: Turn valve clockwise.

3.1.2 Adjust **closing latch speed**: 15° to close.

- Increase latch speed: Turn valve counter-clockwise.
- Decrease latch speed: Turn valve clockwise.

3.1.3 Adjust **opening backcheck**: beginning at 70°.


- Increase resistance: Turn valve clockwise.
- Decrease resistance: Turn valve counter-clockwise.

3.1.4 Adjust **closing delayed action**: angle 180° to start of sweep.

- Increase delayed action: Turn valve clockwise.
- Decrease delayed action: Turn valve counter-clockwise.

3.2 Adjust spring force

Fig.7

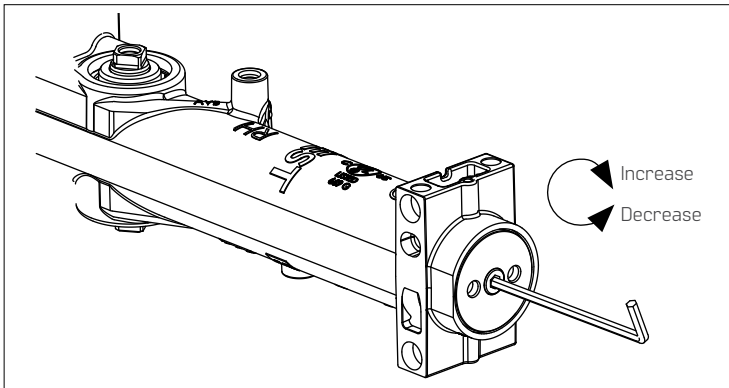

HD8016 - supplied with a size 4

HD8056 - supplied with a size 6

HD8016 ONLY - Barrier free openings: Take an opening force reading from the pull on the door. If required, adjust the spring force to meet the barrier-free requirement.


Depending on opening conditions, a door adjusted to meet barrier-free forces may not have sufficient power to reliably close and latch the door.

Parallel mount					
	Closer size	Max door weight (lbs)	Door width		Full turns
			Interior	Exterior	
HD8016	3	100	2'6"	----	-1 2
	4	125	3'	2'6"	0
	5	150	3'6"	3'	+4
	6	200	4'	3'6"	+1 2
HD8056	5	150	3'6"	3'	-6
	6	200	4'	3'6"	0
	6+	250	---	4'	6+

4 Install covers

Fig.8

- 4.1.1 Place tab in cover slot, opposite main arm.
- 4.1.2 Place cover over closer and snap into place.

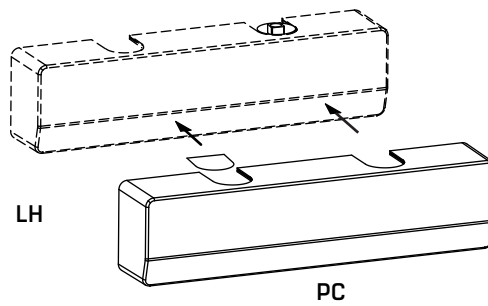

For online instructions visit:

<https://dhwsupport.dormakaba.com/hc/en-us>

For assistance or warranty information:

Call 1-800-392-5209 or visit

<https://dhwsupport.dormakaba.com/hc/en-us>