



Installation Instructions for IDH Max 1300 Cylindrical Locks

Overview

The 83KM/93KM–85KM/95KM IDH Max 1300 Cylindrical Lock provides the following features in an integrated lock, eliminating the need to install separate sensors in and around the door frame:

- electrified locking mechanism
- electronic token reader
- integrated trim
- door status detection
- ability to exit without triggering an alarm

The figure below shows the relationship between the components in the IDH Max system.

Contents

These installation instructions describe how to install, wire, and configure the components provided with your 83KM/93KM–85KM/95KM IDH Max Cylindrical Lock. The following topics are covered.

Site survey 2

Components checklist 2

Special tools checklist 3


Preparing the door and door jamb 4

Installing the lock and through-bolt trim 10

Completing the installation at the door 17

Testing the installation 19

Troubleshooting the installation 20

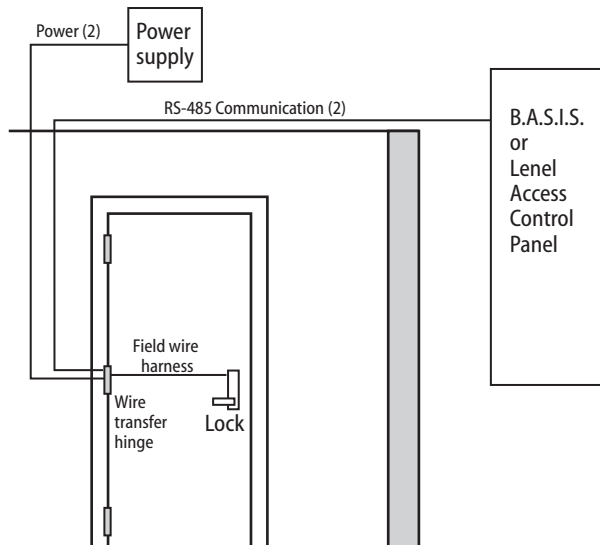

Site survey

Use the following survey to record information about the installation site. You need this information to determine field wiring needs, select a power supply, and determine how to prepare the door for the lock.

Lock information

Lock function:

- DDEL—Electrically locked
- DDEU—Electrically unlocked

Power source for lock:

- Separate power supply
- Power provided through Access Control Panel

Distance of lock site from lock power source: _____ feet

Door information

Door handing and bevel:

- Left hand (LH)
- Left hand, reverse bevel (LHRB)
- Right hand (RH)
- Right hand, reverse bevel (RHRB)

Door thickness: _____ inches (1 3/4" – 2 1/4"; 1 3/8" with spacer)

Environment information

Ambient temperature:

- Is within specifications. See the tables below.

This product meets the following Locked Door Outdoor test requirements for ANSI/BHMA 156.25:

Side of door	Range
Inside	+66°F to +74°F (+19°C to +23°C)
Outside	–31°F to +151°F (–35°C to +66°C)

This product meets the following Full Indoor test requirements for ANSI/BHMA 156.25:

Side of door	Range
Inside and outside	+32°F to +120°F (0°C to +49°C)

Use the following checklist to make sure that you have the items necessary to install the components provided with your 83KM/93KM–85KM/95KM IDH Max Cylindrical Lock.

Components provided in the box:

- Chassis with outside knob/lever and outside rose liner assembly
- Inside escutcheon assembly with field wire harness
- Inside escutcheon access door
- Inside rose liner with RQE feature
- Outside escutcheon assembly
- Inside knob/lever
- Throw member package
- Latch
- Door status switch & magnet assembly
- Plastic bushing package
- Hub washers
- Trim hole insert package
- Escutcheon screw package
- Strike package
- Bar code ID sticker (for your records)

Other items you'll need:

- Power supply for one IDH Max Cylindrical Lock (if you're providing a separate power supply): regulated; 12 volts DC at .85 amps

Note: *If you intend to power more than one lock with the same power supply, calculate the amperage for the power supply by multiplying .85 by the number of IDH Max Cylindrical Locks (1.1 by the number of IDH Max Mortise Locks).*

- Wire transfer hinge: 8 conductors min.; 28 AWG min.

continued

Components checklist

- Field wiring for power connections between the lock and power supply or the lock and intelligent system controller (ISC).

If you're powering the lock(s) through the ISC, calculate the total length of the power wire run by summing:

- The distance from the power supply to the ISC.
- The distance from the ISC to the first door.
- If powering more than one door daisy-chained to the same power supply, add the total distance of the power runs between the doors.

If you're powering the lock(s) using a separate power supply, calculate the total length of the power wire run by summing:

- The distance from the power supply to the first door.
- If powering more than one door daisy-chained to the same power supply, add the total distance of the power runs between the doors.

Refer to the table below to determine the minimum wire gauge based on the number of doors sharing the power supply and the total length of the wire run.

Maximum wire length based on no. of doors daisy-chained to power supply					Minimum wire gauge
1 door	2 doors	3 doors	4 doors		
250 feet	125 feet	75 feet	60 feet		18 AWG
400 feet	200 feet	130 feet	100 feet		16 AWG
600 feet	300 feet	185 feet	150 feet		14 AWG

- Field wiring for RS-485 communication connections between the lock and panel interface module (4000 feet maximum):
Category 5, shielded twisted pair; 24 AWG min.

Special tools checklist

Use the following checklist to make sure that you have the special tools necessary to install the components provided with your 83KM/93KM–85KM/95KM IDH Max Cylindrical Lock.

- Three (3) to four (4) foot, 3/8" drill bit
- KD303 Drill jig
- T15 TORX® bit driver‡

‡ TORX is a registered trademark of the Camcar Division of Textron.

Preparing the door and door jamb

1 Position template and mark drill points

Note: If the door is a fabricated hollow metal door, determine whether it is properly reinforced to support the lock. If door reinforcement is not adequate, consult the door manufacturer for information on proper reinforcement. For dimensions for preparing metal doors, see the W14 Template—Installation Specifications for 83KM/93KM–85KM/95KM IDH Max Cylindrical Locks.

Note: If the door is a LH or RH door, mark the inside of the door. If the door is a LHRB or RHRB door, mark the outside of the door.

For uncut doors and frames

- 1 Measure and mark the horizontal centerline of the knob/lever (the centerline for the chassis hole) on the door and door jamb. Mark the vertical centerline of the door edge.

Note: The recommended height from the floor to the centerline of the lock is 38".

- 2 Fold the W16 Template—Installation Template for 83KM/93KM IDH Max Cylindrical Locks on the dashed line and carefully place it in position on the high side of the door bevel.

Note: For steel frame applications, align the template's horizontal centerline for the latch with the horizontal centerline of the frame's strike preparation.

- 3 Tape the template to the door.
- 4 Center punch the necessary drill points. Refer to the instructions on the template.

For doors with standard cylindrical preparation

- 1 Fold the W16 Template—Installation Template for 83KM/93KM IDH Max Cylindrical Locks on the dashed line. Looking through the hole from the opposite side of the door, align the template so that you see the template outline of the 2 1/8" diameter hole.
- 2 Tape the template to the door.
- 3 Center punch the necessary drill points. Refer to the instructions on the template.

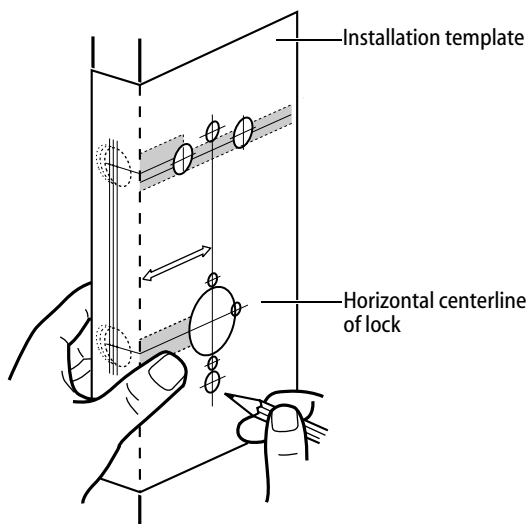


Figure 1 Positioning the template

Preparing the door and door jamb

2 Drill holes and mortise for latch face

- 1 Drill the holes listed below:
 - upper and lower trim holes
 - ▲ 5/8" diameter
 - ▲ through door
 - door status switch & LH/LHRB reader wire hole
 - ▲ 7/8" diameter
 - ▲ through door
 - field harness & RH/RHRB reader wire hole
 - ▲ 7/8" diameter
 - ▲ through door
 - door status switch hole
 - ▲ 1" diameter
 - ▲ meets door status switch & LH/LHRB reader wire hole
 - solenoid wire hole
 - ▲ 3/8" diameter
 - ▲ through door
 - ▲ **before drilling chassis hole**
 - chassis hole
 - ▲ 2 1/8" diameter
 - ▲ through door
 - ▲ after drilling solenoid wire hole
 - latch hole
 - ▲ 1" diameter
 - ▲ meets chassis hole

Note 1: To locate the center of a hole on the opposite side of the door, drill a pilot hole completely through the door.

Note 2: For holes through the door, it is best to drill half-way from each side of the door to prevent the door from splintering.

- 2 Mortise the edge of the door to fit the latch face.

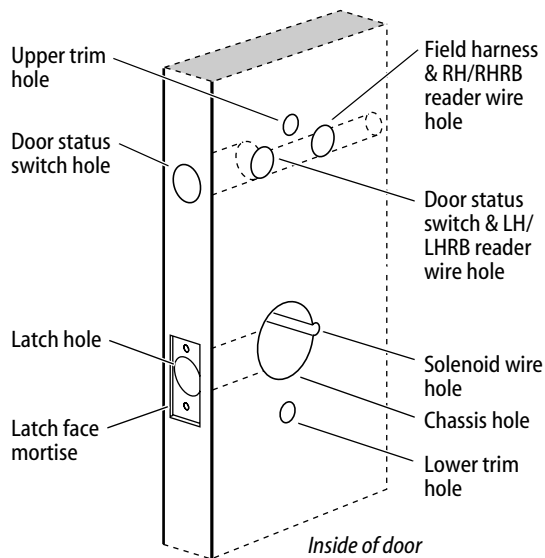


Figure 2 Drilling holes and mortising for the latch face

Preparing the door and door jamb

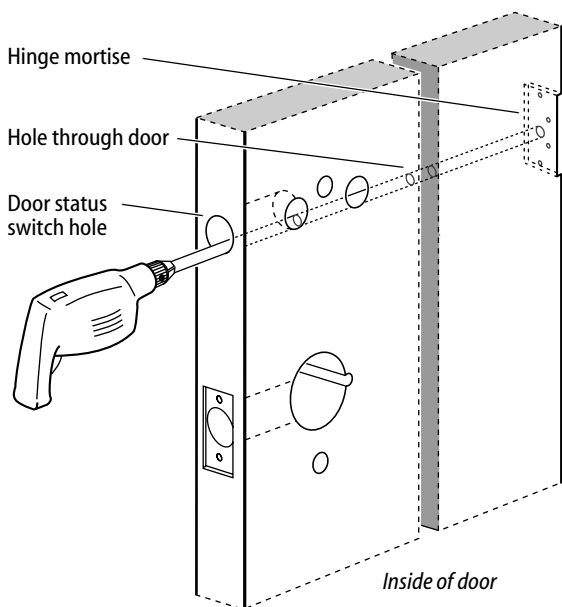


Figure 3 Drilling the hole for the field wire harness

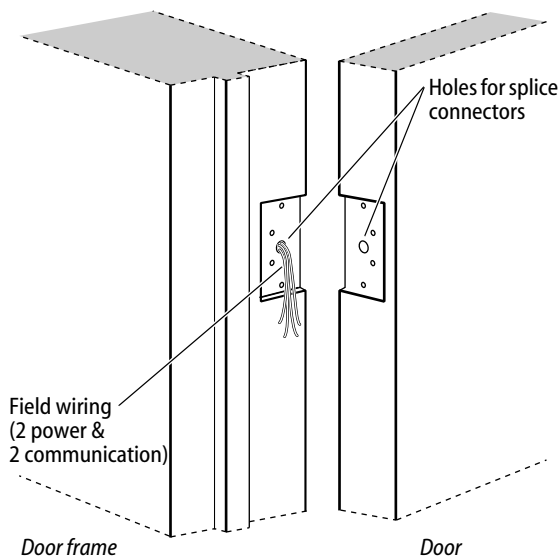


Figure 4 Preparing for the wire transfer hinge

3 Drill hole for field wire harness

Caution 1: Check with your local fire marshal before drilling a fire-rated door. Drilling through a fire-rated door may void the fire label.

Caution 2: Drill carefully through the door, making sure the drill does not break through the face of the door.

- 1 Remove the hinge nearest to the door status switch hole.
- 2 Using a three (3) to four (4) foot drill bit, drill a 3/8" diameter hole through the door, from the bottom of the door status switch hole to the center of the hinge mortise.

Note: It may be easier to drill halfway from each side of the door.

4 Prepare for wire transfer hinge and run field wiring

- 1 Drill a wire access hole through the frame side of the hinge mortise.
- 2 Drill holes (or pockets) for the splice connectors in the frame and door. Refer to the hinge manufacturer's specifications for the hole location.
- 3 De-burr the holes to prevent damage to the hinge leads.
- 4 Run the power field wiring from the location for the lock's power supply to the location for the wire transfer hinge.

Note: For an overview of the system, see the figure on page 1. For specifications for power and communication field wiring, see Components checklist, on page 2.

- 5 Run the communication field wiring from the location for the panel interface module to the location for the door transfer hinge.
- 6 Pull the field wiring down the wall and through the access hole in the frame.

Preparing the door and door jamb

5 Install latch

- 1 Install the latch in the door.

Note: *The latch tube prongs should be centered and should project into the chassis hole.*

- 2 Check that the door swings freely.

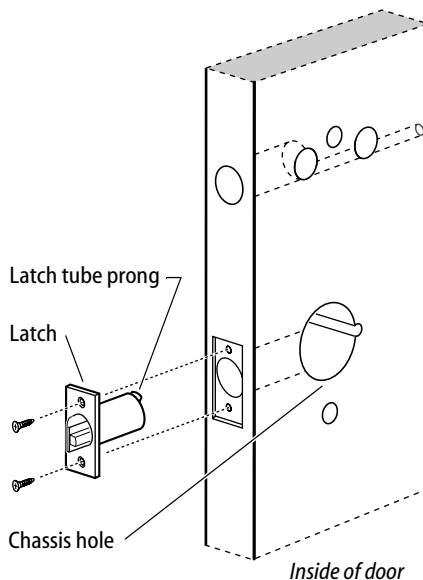


Figure 5 Installing the latch in the door

6 Use drill jig to drill through-bolt holes (9KM only)

- 1 Press the drill jig (KD303) onto the door, engaging it with the latch tube prongs. Make sure the front edge of the jig is parallel with the door edge.
- 2 Drill the through-bolt holes (5/16" diameter) halfway into the door.
- 3 Turn the drill jig over and repeat steps 1 and 2 from the opposite side of the door.

Note: *Replace the drill jig after 10 door preparations.*

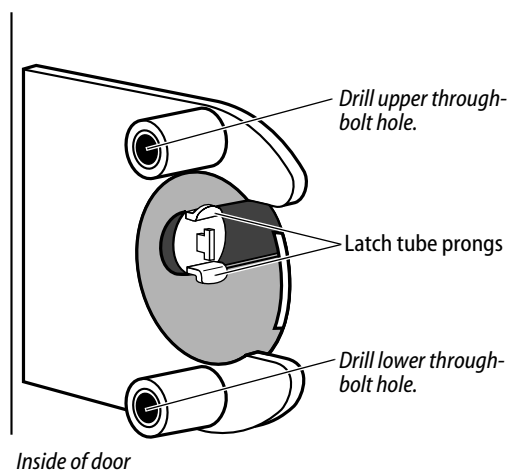


Figure 6 Installing the drill jig and drilling the through-bolt holes

Preparing the door and door jamb

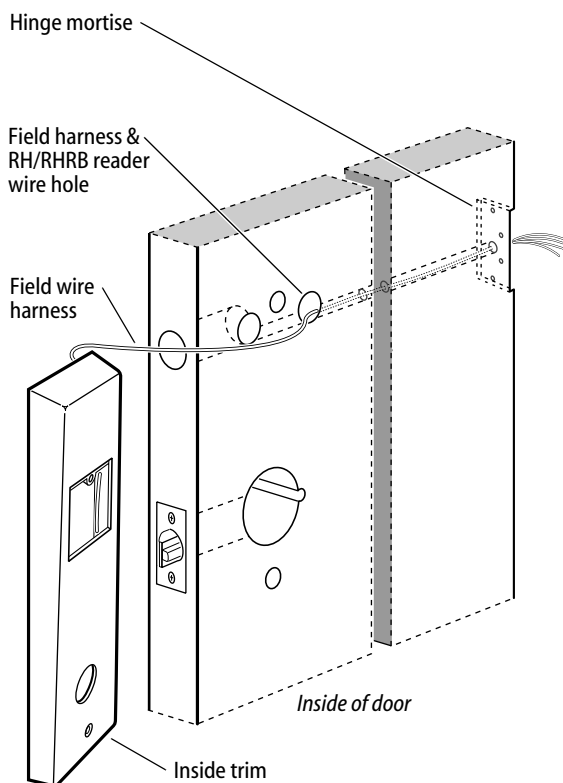


Figure 7 Pulling the field wire harness through the door

7 Pull field wire harness through door

- 1 Feed the field wire harness (connected to the inside trim) into the field harness & RH/RHRB reader wire hole and down into the hole drilled through the door to the hinge mortise.
- 2 From the latch edge of the door, fish the field wire harness through the door to the hinge mortise.
- 3 Make sure there are 3" to 4" of slack in the field wire harness to allow access to the control electronics circuit board in the inside trim.

Note: You can let the trim dangle from the field wire harness while completing tasks 8 through 15.

Preparing the door and door jamb

8 Install door status switch and magnet

- 1 On the door jamb, mark the drill point for the 1" diameter magnet hole. This hole should be directly opposite the door status switch reader wire hole when the door is closed.
- 2 Drill a 1" diameter hole for the magnet, at least 1 3/4" deep.
- 3 Insert the magnet in the hole.
- 4 Insert the door status switch assembly into the door status switch hole in the edge of the door, feeding the connectors out the wire hole to the inside of the door, as shown in Figure 8.

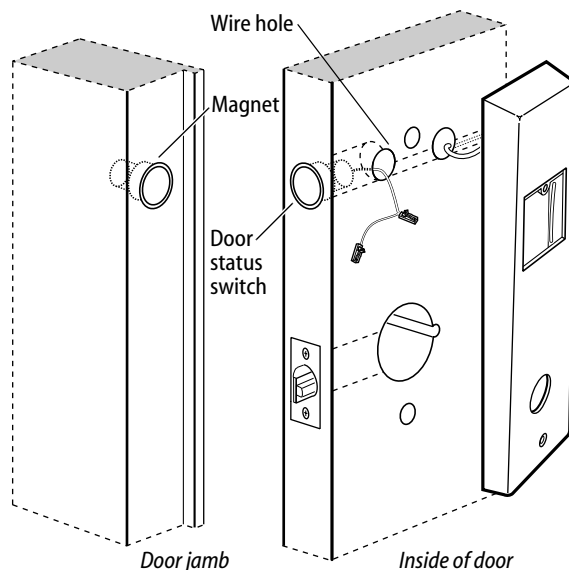


Figure 8 Installing the door status switch and magnet

9 Install strike box and strike plate

- 1 In alignment with the center of the latchbolt, mortise the door jamb to fit the strike box and strike plate.
- 2 Insert the strike box and secure the strike with the two screws provided.
- 3 Check the position of the deadlocking plunger against the strike plate.

Caution: The deadlocking plunger of the latchbolt must make contact with the strike plate, as shown in Figure 9b. The plunger deadlocks the latchbolt and prevents someone from forcing the latch open when the door is closed.

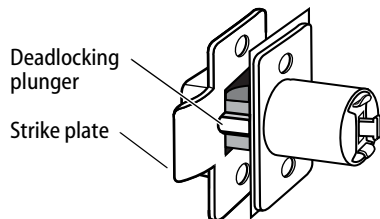


Figure 9b Aligning the deadlocking plunger with the strike plate

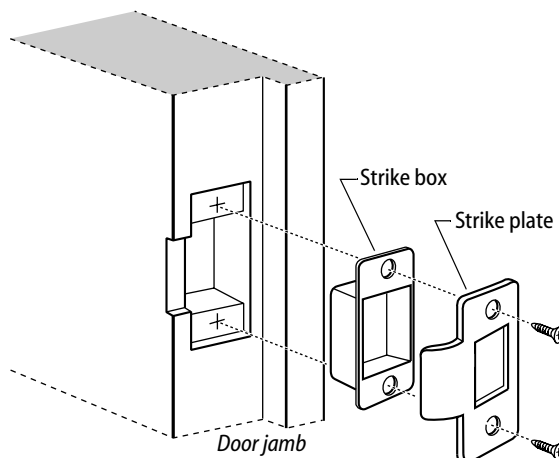


Figure 9a Installing the strike box and strike plate

Installing the lock & through-bolt trim

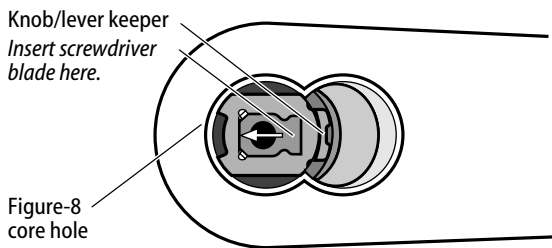


Figure 10 Removing the outside knob/lever

10 Remove outside knob/lever

- 1 Insert the control key into the core and rotate the key 15 degrees to the right.
- 2 Insert a flat blade screwdriver into the figure-8 core hole and into the knob/lever.
- 3 Press the screwdriver blade in the direction of the arrow in Figure 10.

Note: You cannot remove the knob/lever if the screwdriver blade is inserted too far past the keeper.

- 4 Slide the knob/lever off of the sleeve.

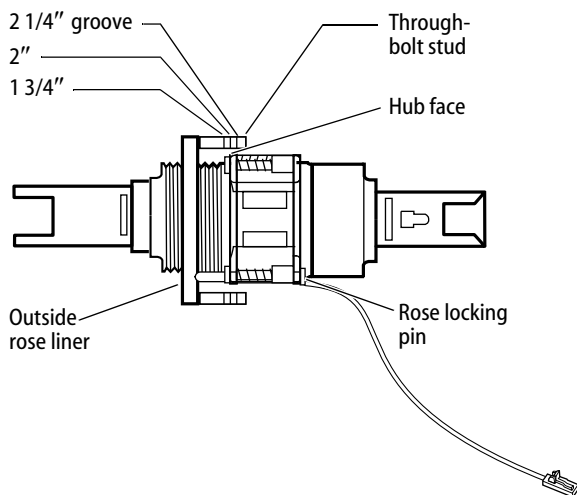


Figure 11 Adjusting the rose liner for the door thickness

11 Adjust for door thickness

- 1 Determine the door's thickness.
- 2 Pull the rose locking pin and rotate the outside rose liner until the proper groove on the through-bolt stud lines up with the hub face.

Note 1: Make sure that the locking pin fully locks into the rose liner.

Note 2: The lockset fits doors 1 3/4" to 2 1/4" thick. (A spacer is available for 1 3/8" doors.)

Installing the lock & through-bolt trim

12 Install lock chassis and engage retractor in latch

From the outside of the door, insert the lock chassis into the 2 1/8" chassis hole, routing the solenoid wire through the notch.

Caution: Make sure that the latch tube prongs engage the chassis frame and that the latch tailpiece engages the retractor.

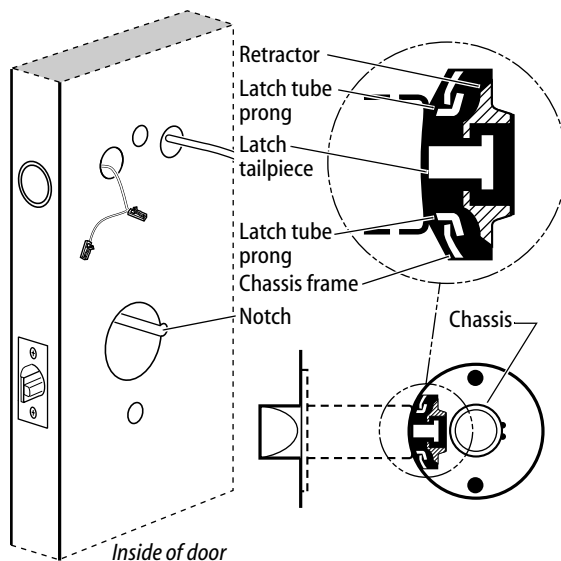


Figure 12 Installing the lock chassis and engaging the retractor in the latch

13 Install through-bolts and RQE rose liner

- 1 Place the RQE rose liner on the chassis, aligning the holes in the rose liner with the holes prepared in the door.

Caution: Make sure that there is clearance for the solenoid wire between the RQE rose liner and the door.

- 2 Install the through-bolts through the RQE rose liner and door in the top and bottom holes.
- 3 Tighten the RQE rose liner on the door with the through-bolts.

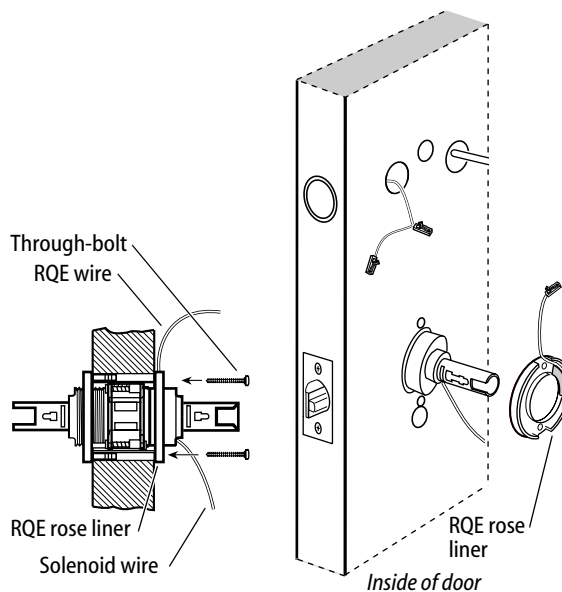


Figure 13 Installing the through-bolts and RQE rose liner

Installing the lock & through-bolt trim

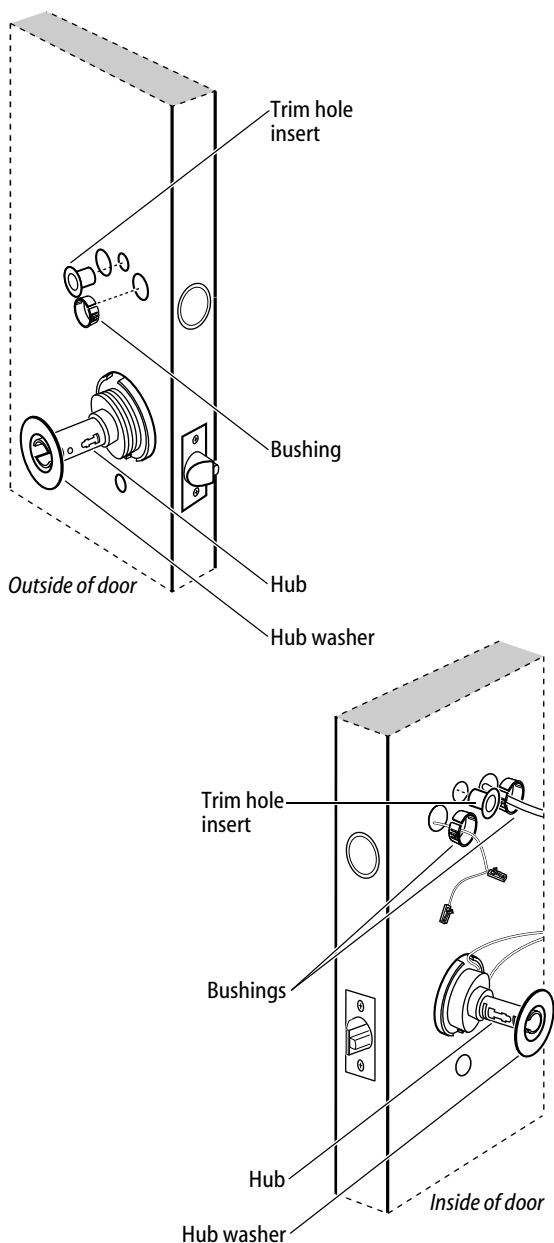


Figure 14 Installing the trim hole inserts, bushings, and hub washers

14 Install trim hole inserts, bushings, and hub washers

1 Insert the two trim hole inserts into the upper trim hole on each side of the door, as shown in Figure 14.

2 For LH and LHRB doors

Insert two bushings into the door status switch & LH/LHRB reader wire hole on each side of the door, as shown in Figure 14.

For RH and RHRB doors

Insert two bushings into the field harness & RH/RHRB reader wire hole on each side of the door.

3 Insert a bushing into the remaining wire hole on the inside of the door, as shown in Figure 14.

4 On each side of the door, slide a hub washer over the chassis sleeve so it rests on the hub.

Installing the lock & through-bolt trim

15 Connect reader wire harness

1 For LH and LHRB doors

From the outside of the door, feed the reader wire harness connector through the door status switch & LH/LHRB reader wire hole.

For RH and RHRB doors

From the outside of the door, feed the reader wire harness connector through the field harness & RH/RHRB reader wire hole.

Caution: When routing the reader wire harness, make sure the reader wire harness is not routed across any sharp edges or over any surface that could damage its sleeving or wire insulation.

- 2 Temporarily rest the outside trim on the door by inserting the trim studs into the trim holes.
- 3 Connect the reader wire harness to the control electronics circuit board in the inside trim.

Caution: When connecting the reader wire harness, make sure:

- there are no loose wire connections where the wires are inserted into the reader wire connector
 - the reader wire harness connector is fully seated in its mating connector on the control electronics circuit board.
- 4 From the inside of the door, feed the solenoid and sensor wire harness from the control electronics circuit board, as well as the sensor wires and the solenoid wire, through the large opening in the inside trim.

16 Set the control electronics board DIP switches

Each IDH Max unit must be addressable (able to be identified automatically by the access control system) with a unique address that matches its Lenel or B.A.S.I.S.® reader address set up in the management software. See the *System Administration User Guide* for more information on reader addressing.

- 1 On the inside control electronics board use the first five switches to set the reader address in binary code. Switch one is the least significant digit.

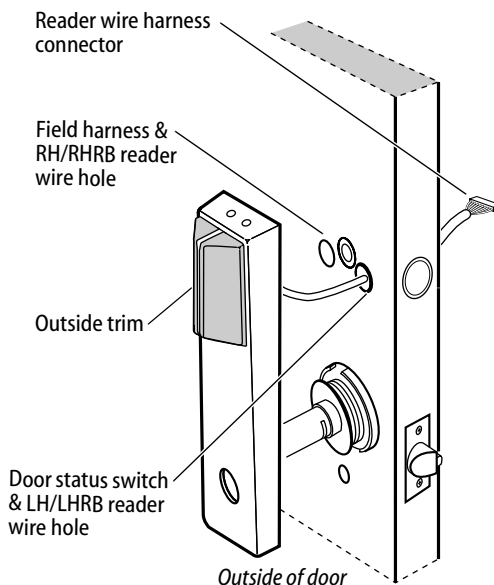


Figure 15a Feeding the reader wire harness connector through the wire hole

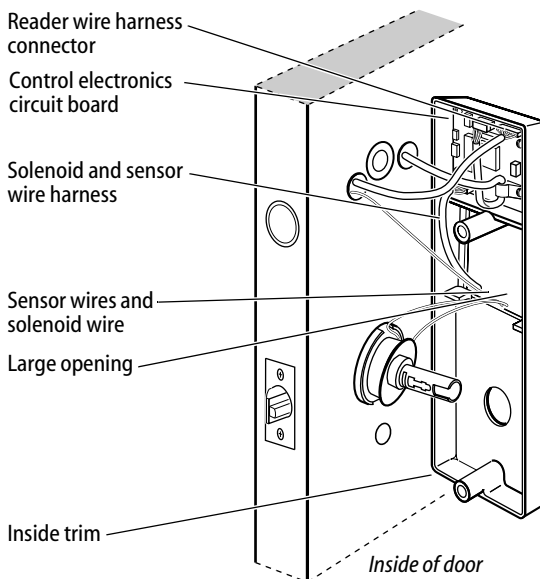


Figure 15b Connecting the reader wire harness to the control electronics circuit board

Installing the lock & through-bolt trim

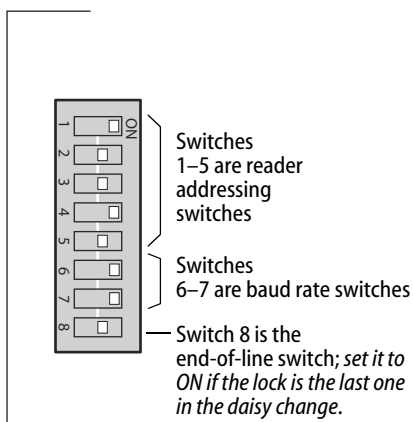


Figure 16 DIP switches on the Control Electronics circuit board set to reader address 5 and 38,400 bps baud rate and not end of line.

For example, to address an IDH Max Lock with address number 5, the binary equivalent number would be 00101 – OFF OFF ON OFF ON. See table below.

Reader address	(16) Switch 5	(8) Switch 4	(4) Switch 3	(2) Switch 2	(1) Switch 1
0			All off		
1					ON
2				ON	
3				ON	ON
4			ON		
5			ON		ON
6			ON	ON	
7			ON	ON	ON
8		ON			
9		ON			ON
10		ON		ON	
11		ON		ON	ON
12		ON	ON		
13		ON	ON		ON
14		ON	ON	ON	
15		ON	ON	ON	ON
16	ON				
17	ON				ON
18	ON			ON	
19	ON			ON	ON
20	ON		ON		
21	ON		ON		ON
22	ON		ON	ON	
23	ON		ON	ON	ON
24	ON	ON			
25	ON	ON			ON
26	ON	ON		ON	
27	ON	ON		ON	ON
28	ON	ON	ON		
29	ON	ON	ON		ON
30	ON	ON	ON	ON	
31	ON	ON	ON	ON	ON

Installing the lock & through-bolt trim

- Use the table below to set both switches 6 and 7 to the baud rate at which the locks will communicate with the intelligent controller.

Baud rate	Switch 6	Switch 7
2,400	All off	
9,600		ON
19,200	ON	
38,400	ON	ON

- For the last IDH Max Lock in the daisy-chain only, set switch 8 to ON. Otherwise, set switch 8 to OFF.

17 Secure through-bolt trim and complete connections

- Position the inside and outside trim onto the door.
- Making sure that the trim does not pinch the wires**, secure the trim to the door—but do not tighten. Use the combination mounting screw at the top trim hole and the standard mounting screw at the bottom trim hole.

Caution: When routing the solenoid and sensor wire harness, the sensor wires, and the solenoid wires, make sure the wires are not routed across any sharp edges or over any surface that could damage their sleeving or wire insulation.

- Make the three (3) sensor connections and solenoid connection, and place the wires into the inside trim.

Wire connection	Color	No. of wires	No. of pins
Solenoid	Yellow	2	3
RQE	Brown/ Orange	2	3
Latch status sensor	Purple	2	2
Door status sensor	White	2	2

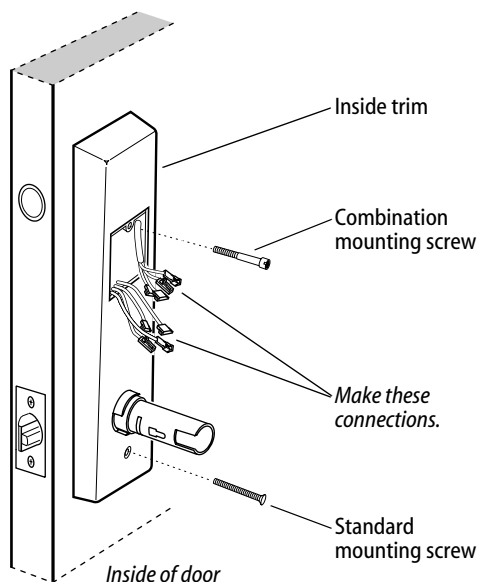


Figure 17 Securing the through-bolt trim and completing connections

Installing the lock & through-bolt trim

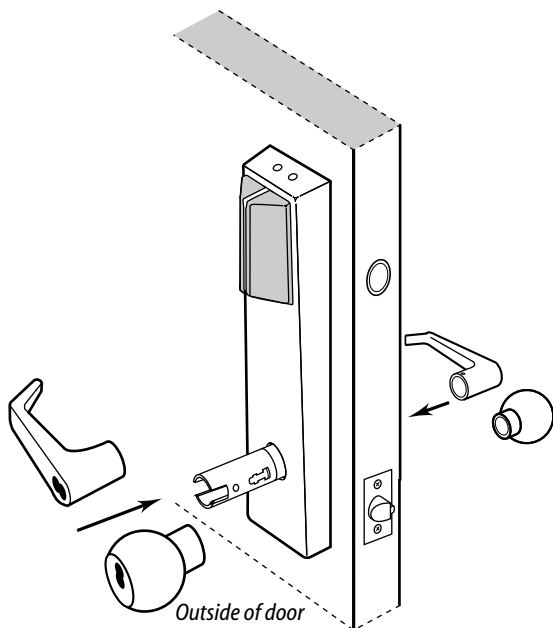


Figure 18 Installing the knobs/levers

Caution: When making the sensor connections and solenoid connection, make sure:

- there are no loose wire connections where the wires are inserted into the connectors
- the connectors are firmly mated.

18 Install inside and outside knobs/levers

Note: To use a core and throw member from a manufacturer other than BEST with a 9KM Lock, see the Installation Instructions for 9K Non-interchangeable Cores & Throw Members (T56093). Skip task 17 and task 18.

1 For the inside and outside knobs

Push firmly on the knob until it is seated.

For the inside and outside levers

With the handle pointing toward the door hinges, push firmly on the lever until it is seated.

- 2 Tighten the trim mounting screws.
- 3 Turn the knobs/levers to check that they operate smoothly.

Completing the installation at the door

19 Install core and throw member

- 1 Install the blocking plate onto the throw member.

Caution: You must use the blocking plate to prevent unauthorized access.

For 6-pin core users only: Install the plastic spacer (not shown, supplied with permanent cores) instead of the blocking plate, on the throw member.

- 2 Insert the control key into the core and rotate the key 15 degrees to the right.
- 3 Insert the throw member into the core.
- 4 Insert the core and throw member into the knob/lever with the control key.
- 5 Rotate the control key 15 degrees to the left and withdraw the key.

Caution: The control key can be used to remove cores and to access doors. Provide adequate security for the control key.

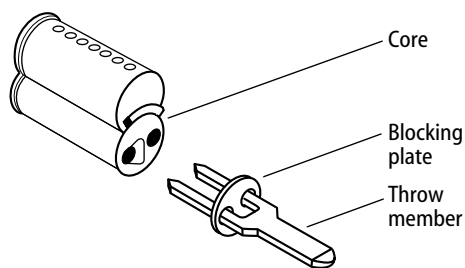


Figure 19a Installing the blocking plate and throw member

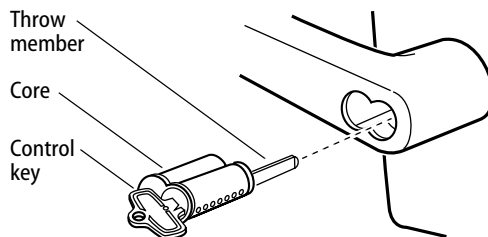


Figure 19b Installing the core

20 Install access door

- 1 **Making sure that the access door does not pinch any wires,** insert the tabs of the access door into its mating slots and swing the door closed.
- 2 Use a T15 TORX bit driver to secure the access door with the security screw. Tighten firmly.

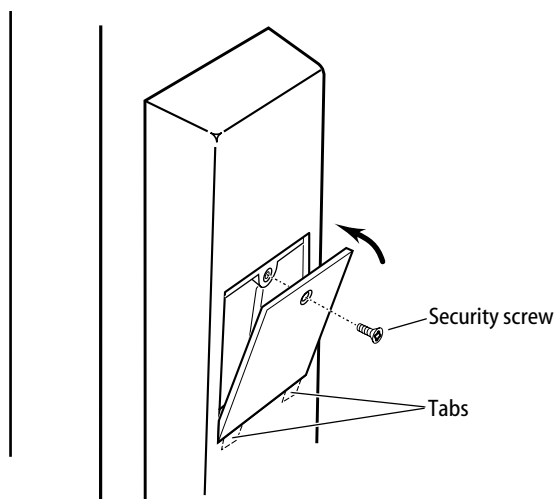


Figure 20 Installing the access door

Completing the installation at the door

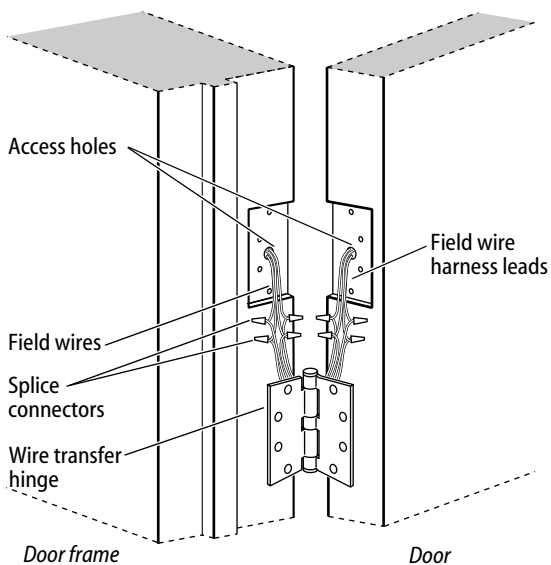


Figure 21 Installing the wire transfer hinge

21 Install wire transfer hinge

- 1 Trim the four wires of the field wire harness, which you pulled through the hinge edge of the door in Task 7. Leave sufficient length to connect to the wire transfer hinge.
- 2 Splice the power and communication field wiring to the four pairs of leads on the frame side of the hinge, following the hinge manufacturer's instructions.
- 3 Splice the four field harness wires (listed in the table below) to the four pairs of leads on the door side of the hinge, matching each pair of leads to its corresponding field wire.

Wire	Color
Ground	Black
12 VDC	Red
Com +	Orange
Com -	Green

- 4 Insert the wires and splice connectors into the holes or pockets in the door and frame, being careful not to pinch the wires. Install the wire transfer hinge.

22 Optional: Install lock power supply

If you are providing a separate power supply for the lock instead of providing power via the panel interface module, connect the two power field wires (run from the wire transfer hinge) to the power supply. Make sure power (12 volts DC) and ground are connected properly.

Follow the instructions provided by the power supply manufacturer. Do not plug in the power supply yet.

Note: For specifications for the power supply, see Components checklist, on page 2.

Testing the installation

23 Connect to the BAS-500 or BAS-1000 access control panels

- 1 If necessary daisy-chain all IDH Max Locks by splicing like wires and make all necessary wire runs to either a BAS-500 or BAS-1000 panel.

Note: A BAS-500 panel will accept up to 16 IDH Max 1300 locks and a BAS-1000 panel will accept up to 32 IDH Max 1300 locks.

- 2 Connect the orange wire or its extension to the RS485 connection TR2+ or higher. See Figure 22.
- 3 Connect the green wire or its extension to the RS485 connection TR2- or higher.
- 4 Connect the shield strand to the RS485 connection GND (ground).

24 Test the installation

After downloading panel information to the IDH Max 1300 Locks, perform the following steps to test the installation. Also, perform any standard testing recommended by the manufacturer of the access control panel. If you encounter problems, see *Troubleshooting the installation*, on page 20.

- 1 Check the control electronics' red status LED.
Both LEDs should be blinking red, indicating that the communication connection between the access control panel and the lock's control electronics circuit board is OK.
- 2 After performing any necessary programming for the lock and putting the door in a locked mode, use a valid token to access the lock.

Confirm that the red reader LED, green reader LED, and sounder respond as expected.

The lock should allow access, verifying that the solenoid is working.

To check that the reader is working, view the lock's event history and verify that the information recorded for the token is correct.

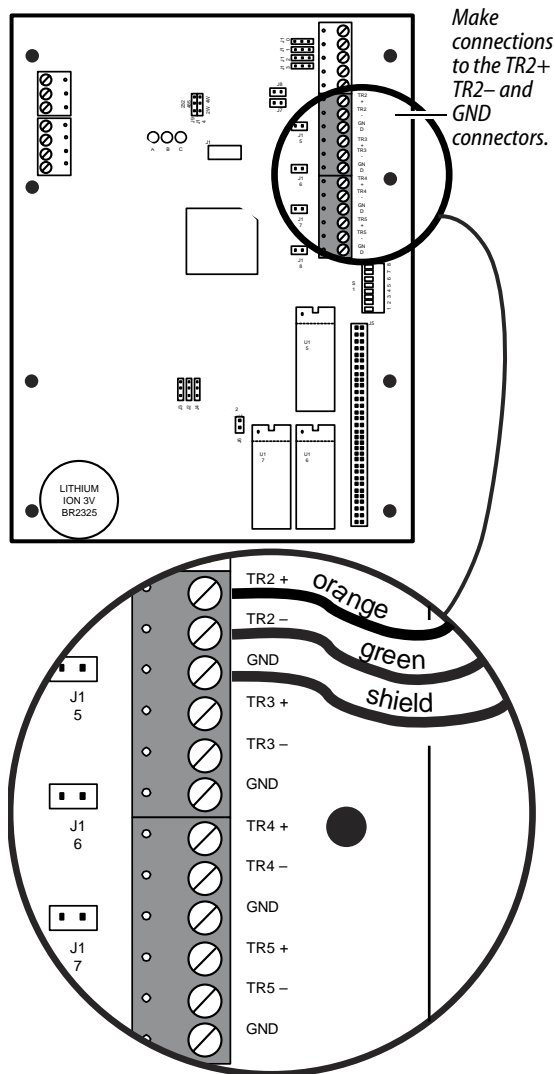


Figure 22 Making connections to the access control panel, BAS-1000 shown.

Troubleshooting the installation

- 3 Use an invalid token to attempt to access the lock.
Confirm that the red reader LED, green reader LED, and sounder respond as expected.
The lock should deny access.
- 4 With the door armed, attempt to exit through the door.
The request-to-exit (RQE) feature should let you exit without triggering an alarm by the access control panel.
- 5 Remove power from the lock and check whether the door remains locked or is unlocked.
Verify that the lock fails safe or secure, according to its function.
- 6 With the door armed, hold the door open. Hold a magnet against the edge of the door, over the door status sensor, until the access control panel sees the door as closed. Then remove the magnet.
Verify that the appropriate alarm response is triggered by the access control panel, indicating that the door status sensor is working.

To troubleshoot installation problems, refer to the table below. For more information, refer to the *IDH Max Lock Service Manual* (T60775) and to the documentation provided by the manufacturer of the access control panel/reader interface.

You notice . . .	Possible causes include . . .	You should . . .
Control electronics' red status LED and access control panel's red status LED are on only 20% of the time.	Communication between the lock's control electronics circuit board and the access control panel has been interrupted.	<p>Make sure DIP switches 6 and 7 on the lock's control electronics circuit board are set to the proper baud rate. See page 15.</p> <p>Check the connections for all communication field wiring.</p> <p>Make sure that the last daisy-chained IDH Max DIP switch is set to ON and all others are OFF. See page 15.</p> <p>Check the communication connections between the field wire harness and the wire transfer hinge.</p>
Control electronics' red status LED is off.	Power is not being supplied to the lock.	<p>Make sure that the lock's power supply is connected to electrical service.</p> <p>Check the connections for all power field wiring to the lock.</p> <p>Check the power connections between the field wire harness and the wire transfer hinge.</p>